


# CPF SERIES

## PLASTIC BOX STIR FANS



### OPERATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

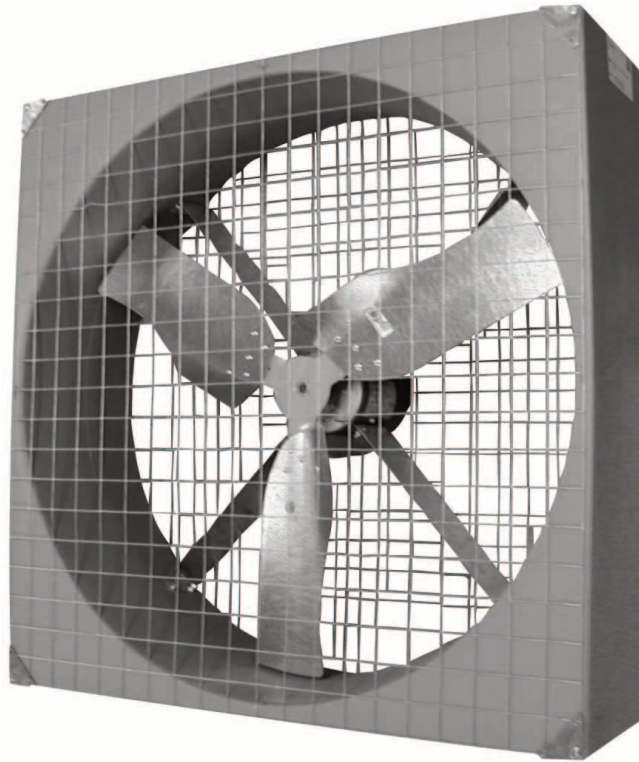

## WARRANTY

**CANARM Ltd.** warrants every new product to be free of defects in material and workmanship, to the extent that, within a period of one year from the date of purchase **CANARM Ltd.** shall either repair or replace at **CANARM's** option, any unit or part thereof, returned freight prepaid, and found to be defective.

This warranty does not include any labour or transportation costs incidental to the removal and reinstallation of the unit at the user's premises. Components repaired or replaced are warranted through the remainder of the original warranty period only.

This warranty applies to the original purchaser-user only; it is null and void in case of alteration, accident, abuse, neglect, and operation not in accordance with instructions.

**NOTICE:** No warranty claims will be honored by **CANARM Ltd.** unless prior authorization is obtained.

## GENERAL SAFETY

Rotating parts, (pulleys, shafts and belts) on fans should not be exposed. Where these components are not protected by ductwork, cabinets or covers, appropriate guards should be employed to restrict exposure to rotating parts. Access doors should not be opened with the fan operating to avoid foreign objects being drawn into the system. On initial start-up, a careful inspection should be carried out to ensure no foreign material is present which could become airborne in the system.

Read installation and operation instructions carefully before attempting to install, operate or service Canarm CPF Plastic Box Stir Fans. Failure to comply with instructions could result in personal injury and/or property damage. **Retain instructions for future reference.**

**INSTALLATION OR PRODUCT PROBLEMS? DO NOT RETURN TO STORE OF PURCHASE.  
CONTACT CANARM SERVICE AT 1-800-265-1833 (CANADA) 1-800-267-4427 (U.S.A.)  
1-800-567-2513 (EN FRANÇAIS) MONDAY TO FRIDAY 8:00 - 5:00PM E.S.T.**

## MOUNTING INFORMATION

Attach the hanging bracket using the 1/4 - 20 bolts that are included with the screen guard. Remove the bolts from the top front and back corners. Place hanging brackets over the screen, reinsert the bolts through the brackets.

Use any of the holes in the brackets to suspend the fan. Securely fastened chains or metal brackets are recommended when suspending the fan.

The mounting is similar for all sizes. Ensure the guards are reattached before operating the fan.

Additional brackets can also be attached to the bottom for more secure mounting.

**Figure 1**

