

# **EASY CONNECT** TM **INSTALLATION INSTRUCTIONS**

IVL1210A 11/24

**NEED HELP?** Call or Email us first

Our service team is ready to answer your questions... 1-800-265-1833 (English) / 1-800-567-2513 (French) IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca

Monday – Friday



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS **READ ALL INSTRUCTIONS** 

# IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

## **TOOLS AND MATERIALS REQUIRED:**

inserts.





Phillips Screwdriver

Green (Ground)

Wire Cutters

#### SAFETY PRECAUTIONS:

- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE.
- 3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.


### **INSTALLATION:**

Option 1

(L) Black (Live)


(N) White


(Neutral)

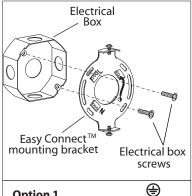

Green (Ground)

<sup>1</sup> ₀ Attach Easy Connect™ mounting bracket to electrical box with electrical box screws (not included).



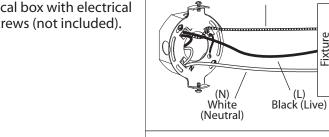

5. Attach fixture to mounting bracket by tightening the 2 screws.

³ං Connect (push) electrical

wires from fixture into correct

4. Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no

bare wire (on the black and


white) is visible at the wire nuts.


 $\mathbb{Z}_{\bullet}$  Attach the metal plate to the socket then screw the glass shade on to the fixture. Ensure the glass is securely attached to

6. Install proper bulb type

and wattage (not included).

the fixture.

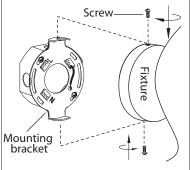

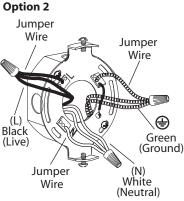

**Option 2:** For multiple green (ground), black (live) and white (neutral) wires joined in the electrical box (house wiring), attach a single "green", "black" and "white" jumper wire before connecting. Strip 7mm from the 6" jumper wires supplied. Green (Ground) Then connect (push) wires into the correct inserts.

